

Problem No.7
Label and Vfr LEDs are Lit Together.



What shall I do?

First, check the action of the verifier.
See “1. How to Clear Jammed Labels”.



Check 1



No improvement?

Check the front cover limit switch.
See “2. Front Cover Limit Switch”.



Check 2



The trouble still persists.

The verifier may be broken.
See “3. How to Stop the Verifier”.



Remedies for Verifier Hard Error

1. How to Clear Jammed Labels

Turn the power off. → Open the cover. Move the verifier from side to side by hand and remove the jammed labels if any to allow the verifier to move smoothly.




2. Front Cover Limit Switch



front cover limit switch


limit switch ON/OFF plate

Unless the front cover limit switch is ON, verifier hard error is detected even if the verifier is in normal condition. Check to see that the limit switch ON/OFF plate shown in the figure on the right is mounted correctly. Hasn't the screw come loose and unsteady? Isn't the tip shaved?

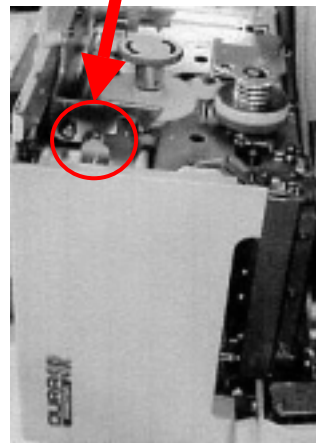

When the screw on the limit switch ON/OFF plate is loose, **tighten it with the plate pulled up.**

When the tip of the plate is shaved too much, the plate must be replaced.

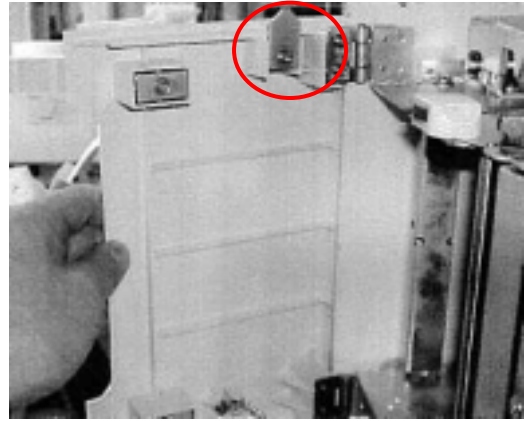

3. How to Stop the Verifier

If you want to print labels temporarily without verification, modify the setting of **“function setting 3”**.

Turn the power off.


Then turn the density switch C to 3.

Turn on the power while pressing F [Mode/Reset] (See the figure on the right.). Press and hold the switch until the buzzer sounds (Release the switch when the buzzer sounds.).

Check to see that A [Ready] LED flashes. (The flashing of [Ready] LED shows that the printer is in the function setting mode.)

Which LED of B is lit? (1 or 2 ?)

Make the LED 4 flash with in E and press and hold D [Enter/Pause] at least 2 seconds. (The buzzer makes a series of beeps.) Press and hold F [Mode/Reset] at least 2 seconds. Turn the power off and reset the density switch.

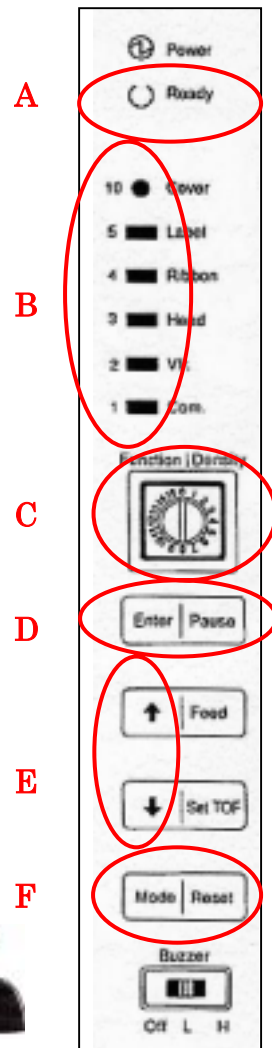

Note: When the function setting is sent to the printer by printing software you generated, the sent setting is effective.



Buzzer switch must be at L or H.

Turn the printer on and print labels.

Please contact us when you want the verifier to be fixed.

